NOMAP QUICKSTART GUIDE




More on Nomad

Go to Hamina Onsite: <u>hamina.com</u>

To charge device, plug USB Type-C charger into both the Charge Port and the power source.

3 To operate device, plug USB Type-C charger into both the Nomad and the host device (iPhone / iPad / laptop).

 To turn off device, push button down (until flush with Nomad hardware).
To turn off, push button again (button extends out of Nomad hardware).

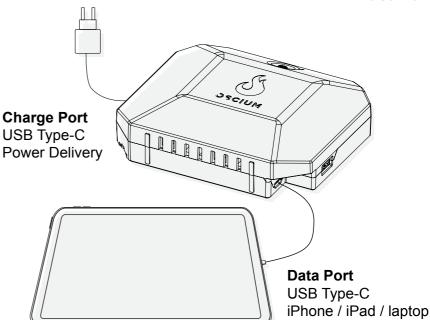

Nomad comes equipped with a fast charge PD power supply. For shipments to customers in the US, a Type A connector will be included. For customers in Europe, a Type C connector will be included.